


# 1884131 O-Sheraton Demilune


### **Parts and Hardware List**

A.	Top Assembly	1 pc
B.	Legs I	2 pcs
C.	Legs II	2 pcs
D.	Stationary Shelf	1 pc
E.	Metal Brackets	4 pcs
F.	Long Allen Head Bolts	8 pcs
G.	Short Allen Head Bolts	8 pcs
H.	Lock Washers	8 pcs
I.	Flat Washers	8 pcs
J.	Allen Head Wrench	1 pc
K.	Optional Allen Head Screwdriver Bit	1 pc

- \* Please make sure you have all the parts and hardware indicated above before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.

## **Hardware Illustrations**






F. Long Allen Head Bolt

G. Short Allen Head Bolt





H. Lock Washer

I. Flat Washer

Page 1 of 3 R1-11-18-04




# 1884131 O-Sheraton Demilune

### **Attach Legs**

#### Parts required

A.	Top Assembly	1 pc	H.	Lock Washers	8 pcs
B.	Legs I	2 pcs	I.	Flat Washers	8 pcs
C.	Legs II	2 pcs	J.	Allen Head Wrench	1 pc
F.	Long Allen Head Bolts	8 pcs	K.	Optional Allen Head Screwdriver Bit	1 pc

1. Attach Legs I & II (B, C) Pull the drawer out and place the Top Assembly (A) upside down on a soft surface. Align the pre-threaded holes in the Legs I & II (B, C) with the pre-drilled holes in the corner blocks of Top Assembly (A) as shown in Illustration #1. Secure with Long Allen Head Bolts (F), Lock Washers (H) and Flat Washers (I) using Allen Head Tool (J or K).

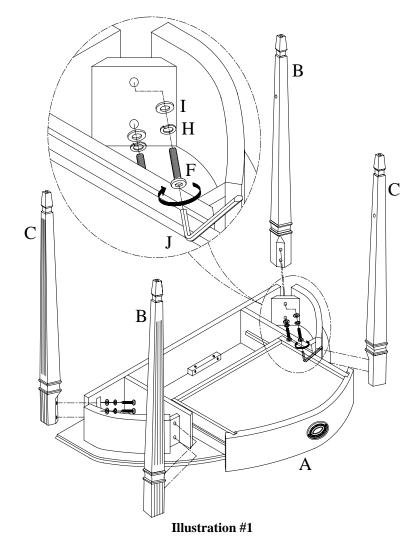

Page 2 of 3 R1-11-18-04




# 1884131 O-Sheraton Demilune

### **Attach Stationary Shelf**

#### Parts required

B.	Legs I	2 pcs	G.	Short Allen Head Bolts	8 pcs
C.	Legs II	2 pcs	J.	Allen Head Wrench	1 pc
D.	Stationary Shelf	1 pc	K.	Optional Allen Head Screwdriver Bit	1 pc
E.	Metal Brackets	4 pcs			

- 2. <u>Attach Metal Brackets (E)</u> Align the pre-drilled round holes in the Metal Brackets (E) with the pre-threaded holes Legs I & II (B, C). Secure with Short Allen Head Bolts (G) using Allen Head Tool (J or K). See Illustration #2.
- 3. <u>Attach Stationary Shelf (D)</u> Align the pre-threaded holes in the Stationary Shelf (D) with the pre-drilled oval holes in the Metal Brackets (E). Secure with Short Allen Head Bolts (G) using Allen Head Tool (J or K). See Illustration #2.

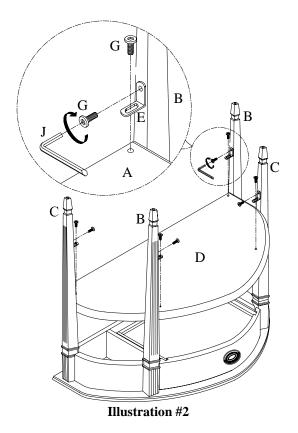

Page 3 of 3 R1-11-18-04